

# FINGERPRINT PADLOCK

SKU Code: SHA5304

## YOUR FINGER IS YOUR KEY!

Ideal for Gym Lockers, Backpack, Luggage, Golf Bags, School Lockers, Wardrobes, Warehouse, Bicycle, etc.



10 Groups of Fingerprints



Usb Rechargeable



IP65 Waterproof



Compact Design



Premium Quality

### Know your padlock

1. Shackle (5mm diameter)
2. LED indicator (triple coloured light)
3. MicroUSB charging port (with waterproof stopper)
4. Fingerprint reader
5. Zinc alloy lock body



### Specifications

Model No/SKU	ZD- GL01 / SHA5304
Colour	Black
Case material	Kirsite
Open mode	Fingerprint unlock
Qty of fingerprint saved	10 pcs
Full charging time	1-2 hours
Charging connector	Micro USB
Full charged unlock times	9000 times
Standby time	12 months
Working temperature	-20° to +65°

 
### Understand your padlock status

LED indicates	Beed Sound	Padlock status / notification
<b>Battery status indication</b>		
• Blinking Red		Low power
• On (solid) Red		Charging
• Light Off		Charged
<b>Working status indication</b>		
• Blinking Green	di.	Unlocked
• Blinking Red	di. di.	Unlock failed
<b>Fingerprint registering status indication</b>		
• On (solid) Blue	di.	Waiting for Administrator's authorization
• Blinking Green	di.	Waiting fo recording
• Blinking Blue	di.	Fingerprint recognized
• Blinking Red	di. di.	Fingerprint unrecognized
• On 1 second	Long di-	Fingerprint success registered

### Administrator's fingerprint registration

Note:


Keep your finger clean and dry before registration. Any finger touch will be able to unlock the first setup.

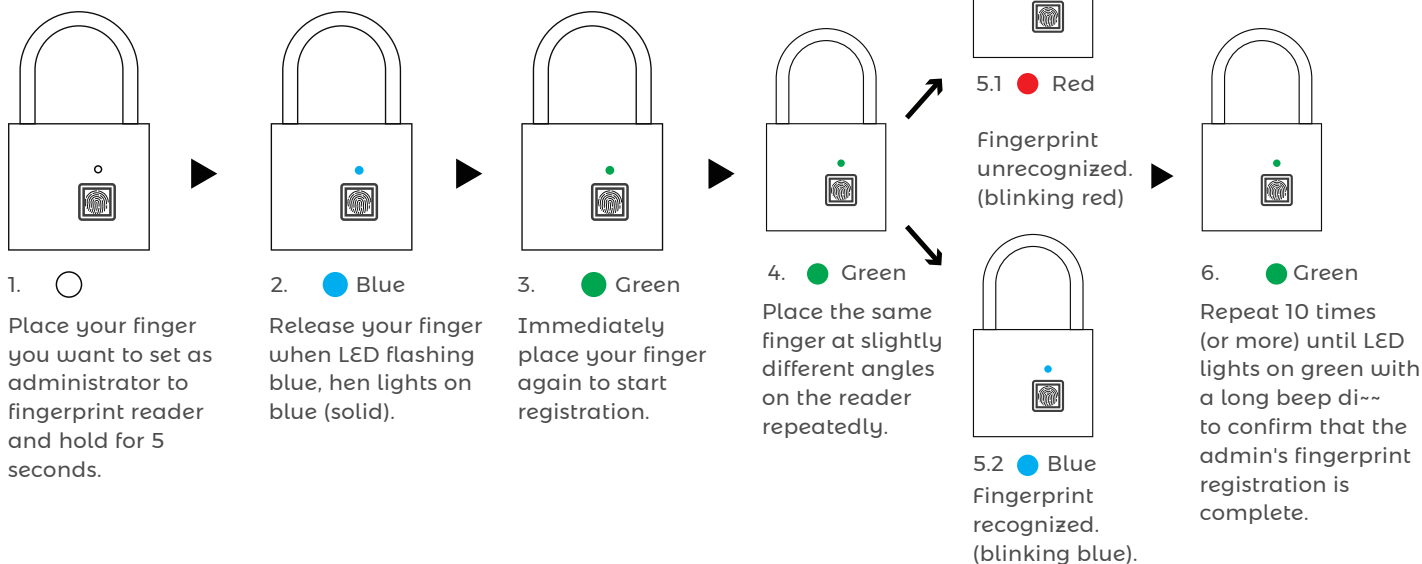

### Add fingerprints

Note:

 
- 1). Up to 10 fingerprints can be registered to unlock your padlock.
- 2). The 1st and 2nd registered fingerprints are the administrator by default.

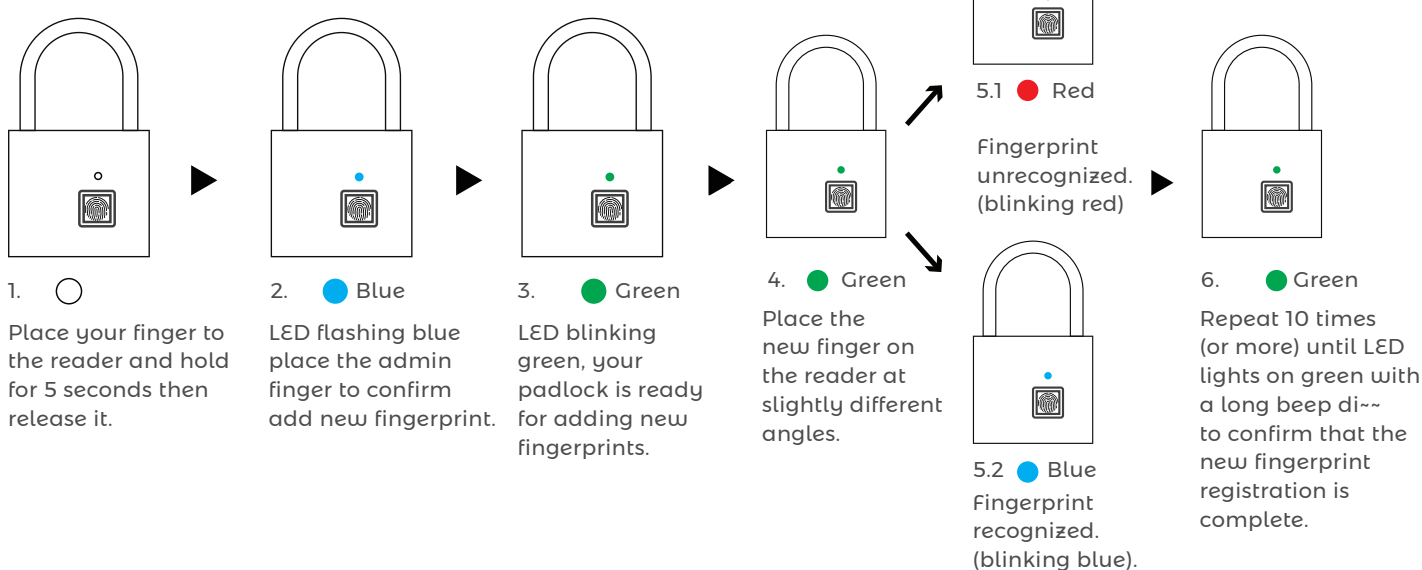

### Delete all fingerprints (Reset to factory mode)

Caution:

 - 1). All registered fingerprints will be deleted by this operation.
- 2). Delete by administrator's fingerprint(s) only.




1. ● Red

Place the admin finger to the reader and hold for 10 seconds till LED flashing red.



2. ● Red

 Release and place it again to confirm deleting all registered fingerprints.



3. ● Green

LED lights on green with a long beep di~, all registered fingerprint(s) was deleted, your padlock will be restored to factory default status.



### Low power alert

The padlock blinks red for 15 seconds per minute or it blinks red and beeps while unlocking if battery on low power status, please recharge it by universal USB DC5V/0.5-1A adaptor.

FC CE ♻️ RoHS

# WATERPROOF

Up to IP65 level, prevent the dust and rain efficiently

